# American Standard

# **HAMPTON** KITCHEN FAUCETS

# Installation Instructions 4751.732

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.


To ensure that your installation proceeds smoothlyplease read these instructions carefully before you begin.



Certified to comply with ASME A112.18.1M M968721 REV. 1.3

#### **RECOMMENDED TOOLS**



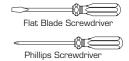






### **INSTALL FAUCET**


**CAUTION** Turn off hot and cold water supplies before beginning.

- Install LOCK NUT (1) and RUBBER WASHER (2) onto SPOUT BODY (3). Insert SPOUT BODY (1) through hole from underside of SINK.
- Place RUBBER RING (4) into SPOUT ESCUTCHEON (5) and screw ESCUTCHEON (5) onto SPOUT BODY (3) until snug against internal stop.
- From under sink tighten LOCK NUT (1) to secure SPOUT.

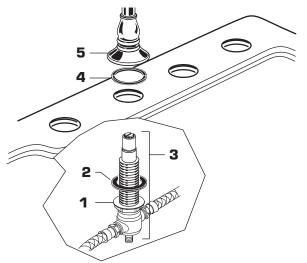

### **INSTALL VALVE BODIES**

- Install LOCK NUT (1) and RUBBER WASHER (2) onto VALVE BODIES (3). Insert VALVE BODY (3) through hole from underside of SINK.
- Place RUBBER RING (4) into ESCUTCHEON (5) and screw ESCUTCHEON (5) onto VALVE BODY (3) until snug against internal stop.
- From under sink tighten LOCK NUT (1) to secure VALVE BODY (3).
- Insert SEAL WASHERS (6) into SPOUT BODY SUPPLY HOSES (7) and tighten connection to VALVE BODIES (3).

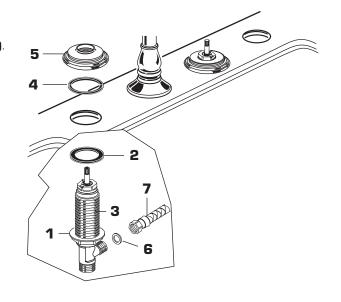

# 3 INSTALL HANDLES

#### **CROSS HANDLE**


- Push ADAPTER (2) into HANDLE BASE (3) in a way that the male square on the ADAPTER (2) fits in the female 8 point star of the HANDLE (4).
- Turn HANDLE STEM (1) to the off position. Push HANDLE BASE (3), ADAPTER (2) and HANDLE (4) onto VALVE STEM (1).
- Tighten HANDLE SCREW (5).
- Push INDEX CAP (6) in top of HANDLE (4).

#### **LEVER HANDLE**

- Push ADAPTER (2) into LEVER HANDLE BASE (7) in a way that the male square on the ADAPTER (2) fits in the female star of the HANDLE BASE (7).
- Turn HANDLE STEM (1) to the off position. Push LEVER HANDLE BASE (7) and ADAPTER (2) onto VALVE STEM (1).
- Tighten HANDLE SCREW (6).

Check alignment, if not satisfactory aligned;


- Push out ADAPTER (2) carefully.
- Turn ADAPTER (2) either 45° or 90° so that male square on ADAPTER (2) catches different female square in LEVER HANDLE BASE (7).
- Assemble and tighten HANDLE SCREW (6). Push INDEX CAP (8) in top of LEVER HANDLE BASE (7).

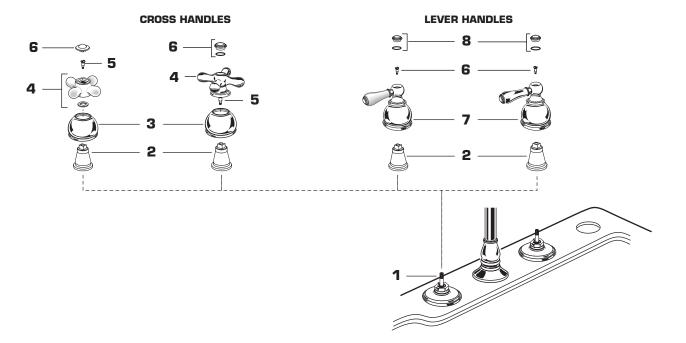

### MAKE WATER SUPPLY CONNECTIONS


NOTE: FLEXIBLE SUPPLIES OR BULL-NOSE RISERS MUST BE PURCHASED SEPARATELY.

■ Connect water supply to FAUCET (1) with 1/2" IPS FLEXIBLE SUPPLIES (3) or 3/8"O.D. BULL-NOSE RISERS (4). Use adjustable wrench to tighten connections. Do not over tighten. Be careful not to kink copper supply when bending. Use tubing cutter to cut to proper length.

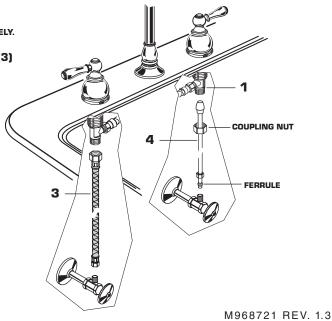


## FITTING WITH SPRAY

- Place SPRAY HOLDER (1) into separate hole of SINK (2) and assemble NUT (3) onto shank from underside of SINK (2).
- Hand tighten NUT (3).

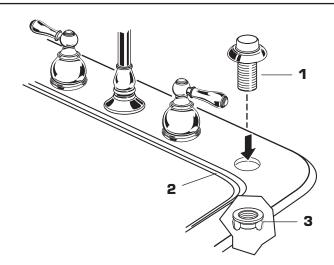

# 6 FITTING WITH SPRAY

■ Feed SPRAY HOSE (1) through SPRAY HOLDER (2) and attach COUPLING NUT (3) of HOSE (1) to HOSE ADAPTOR (4) on valve body. Tighten COUPLING NUT (3) firmly.

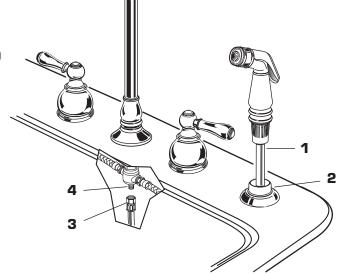

# TEST INSTALLED FAUCET

- Remove AERATOR. With handles in OFF position, turn on water supplies and check all connections for leaks.
- Operate both HANDLES to flush water lines thoroughly. Rotate SPOUT in both directions. Replace AERATOR.
- Direct SPRAY HEAD into sink and activate SPRAY. Check HOSE connections for leaks.

### If faucet drips proceed as follows:

- Aerator may accumulate dirt causing distorted and reduced water flow. Remove aerator and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force-handles turn only 90°.

## CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A
CLOTH WITH A COARSE SURFACE.

